



# DP-ROG-60

## DAILY MAINTENANCE & SAFETY CHECKLIST

1. Inspect tooling plate bearings before each use. For optimal performance, it is recommended to grease heads daily. Heads **MUST** be greased weekly and after each cleaning to ensure proper function. This service can be performed using lithium grease via grease fitting on each bearing body. Keeping the bearing free of contaminants and well-greased is considered regular preventative maintenance.
2. Check any propane fittings for leaks and that all connections are secured.
3. It is recommended to disconnect the battery via quick-disconnect (rear under seat) when storing or transporting the machine.
4. Check oil levels and oil filter before each use. (The engine oil can be verified via dipstick. The transmission fluid inspection windows are viewable from underneath on either side.)
5. Raise heads above the ground utilizing provided stands with safety pins installed correctly on all 4 corners when the machine is not in use or being stored.



SCAN FOR MANUAL AND DATA SHEETS